


ITEM	QTY	PART No.	DESCRIPTION
1	2	40-602-01	CONTROL ARM WELDMENT
2	8	40-602-02	POLY BUSHING
3	4	40-602-03	STEEL SLEEVE
4	4	65-052	1/2 X 4" BOLT
5	4	65-135	1/2 NYLOCK
6	8	65-204	1/2 FLAT WASHER

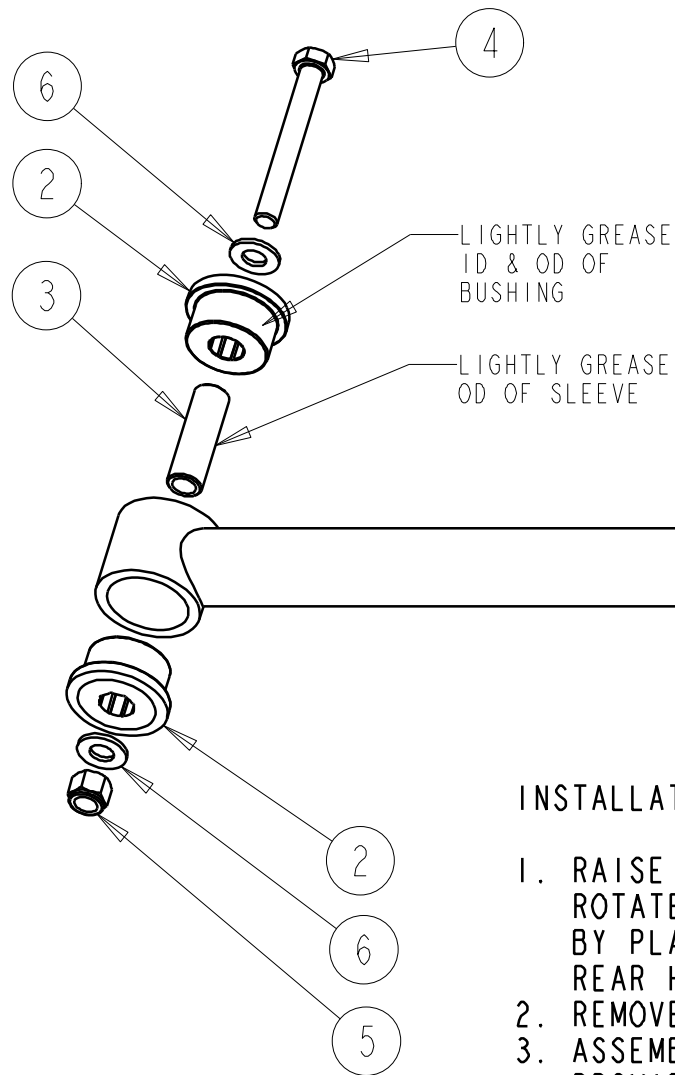

INSTALLATION INSTRUCTIONS: 40-602, 82-92 CAMARO BOLT IN  
LOWER CONTROL ARM

1. RAISE AND SUPPORT CAR. SUPPORT REAR HOUSING SO THAT IT CAN NOT ROTATE WHEN THE STOCK CONTROL ARM IS REMOVED. THIS CAN BE DONE BY PLACING A JACK STAND UNDER THE PANHARD BAR MOUNT ON THE REAR HOUSING.
2. REMOVE ONE STOCK LOWER CONTROL ARM.
3. ASSEMBLE AND INSTALL A NEW LOWER CONTROL ARM, USING THE HARDWARE PROVIDED. DO NOT TIGHTEN THE NUTS AT THIS TIME.
4. REPEAT STEPS 2 & 3 FOR THE OTHER SIDE.
5. WITH THE CAR AT RIDE HEIGHT AND THE WEIGHT ON THE TIRES TIGHTEN ALL NUTS AND BOLTS.

S & W RACE CARS  
11 MENNONITE CHURCH RD  
SPRING CITY, PA 19475

0	27SEP99	JEB	RELEASED
PART No: 40-602		DRW No: 40-602-01	

LOWER CONTROL ARMS  
82-92 CAMARO/FIREBIRD