


40-706-1

INSTALLATION NOTE;
1. REMOVE STOCK BRACE AND KEEP ALL HARDWARE.
2. INSTALL NEW PANHARD BAR BRACE USING THE OEM BOLTS & NUT.

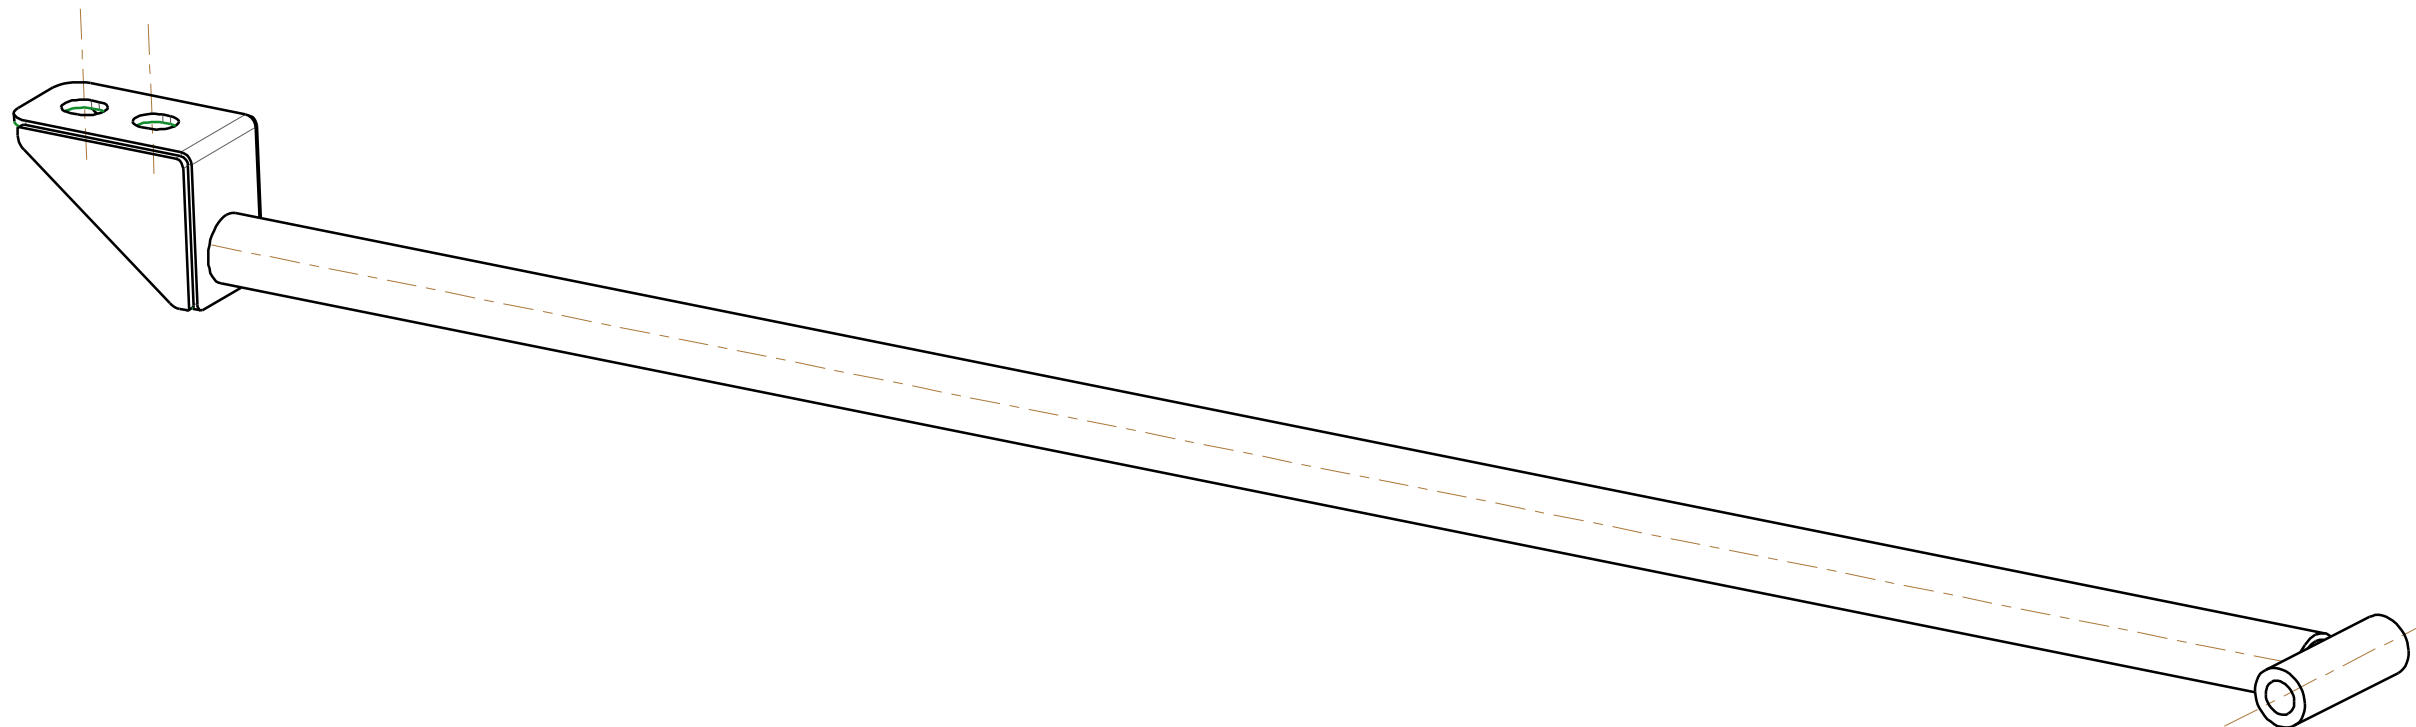

S & W RACE CARS
11 MENNONITE CHURCH RD
SPRING CITY, PA 19475

REV	DATE	DRN	DESCRIPTION
0	17MAY07	JEB	INITIAL RELEASE
TOLERANCES: FRACTIONS $\pm 1/32$ 2 PLC DEC ± 0.01 3 PLC DEC ± 0.005 ANGLES $\pm 0.5^\circ$			PANHARD BAR BRACE GENERAL ARRANGEMENT
MAT'L:			
PART No: 40-706			DRW No: 40-706 - 1